



GeoSDemo[®] v1.34

User Manual

R&D Center «GeoStar navigation» Ltd.
Moscow, 2010

Table of Contents

1. About	6
1.1. Introduction.....	6
2. Abbreviations.....	7
3. Installation Guide	8
4. Operation.....	12
4.1. How to Connect to the Receiver.....	12
4.1.1 Detect COM port automatically.....	12
4.1.2 Set COM ports manually.....	12
4.1.3 Use last COM ports configuration	13
4.1.4 Reading from file.....	13
4.2. Main Window.....	13
4.3. Channels	16
4.4. Charts	17
4.5. Messages	19
4.6. Map	19
4.7. Menu Bar	21
4.7.1 File.....	21
4.7.2 Communication	21
4.7.3 Reading from file	21
4.7.4 Settings	22
4.7.4.1 Set initial parameters.....	23
4.7.4.2 Set serial port parameters	23
4.7.4.3 Set operation mode	24
4.7.4.4 Set navigation task solution parameters.....	24
4.7.4.5 Set output data rate	25
4.7.4.6 Assign data protocol to communication port.....	25
4.7.4.7 Set GPS almanac	26
4.7.4.8 Set GLONASS almanac	26
4.7.4.9 Set GPS ephemerides.....	27
4.7.4.10 Set GLONASS ephemerides	27
4.7.4.11 Set PPS parameters.....	27
4.7.4.12 Enable/disable SV in position fix.....	28
4.7.4.13 Enable/disable NMEA messages.....	28
4.7.4.14 Enable/disable binary messages.....	29
4.7.5 Queries	29
4.7.6 Commands.....	30
4.7.6.1 Query FW version.....	30
4.7.6.2 Restart receiver	31
4.7.6.3 Update FW.....	31
4.7.6.4 Store parameters to Flash.....	33
4.7.7 Update check.....	33
5. Connecting to the Receiver.....	35

List of Figures

Fig. 1. Installation language select	8
Fig. 2. Installer start window	8
Fig. 3. Choosing install location	9
Fig. 4. Selecting a start menu folder	9
Fig. 5. Ready to install window	10
Fig. 6. Installing USB driver window	10
Fig. 7. Setup complete window	11
Fig. 8. Choosing the way of connection	12
Fig. 9. Main settings window	13
Fig. 10. Main program window	14
Fig. 11. Brief navigation data panel	14
Fig. 12. Map of SVs in the sky	15
Fig. 13. Status bar	15
Fig. 14. Channels bookmark for binary data	16
Fig. 15. Channels bookmark for NMEA data	17
Fig. 16. Charts bookmark	18
Fig. 17. Messages bookmark	19
Fig. 18. Displaying position fix data on Google Maps	20
Fig. 19. Displaying position fix data on a simplified map	20
Fig. 20. Menu bar	21
Fig. 21. File item	21
Fig. 22. Communication item	21
Fig. 23. Reading from file parameters	22
Fig. 24. Time/date from the file	22
Fig. 25. Settings list for binary data	22
Fig. 26. Settings list for NMEA data	23
Fig. 27. Set initial parameters panel	23
Fig. 28. Serial port parameters panel	24
Fig. 29. Operation mode panel	24
Fig. 30. Navigation task solution parameters panel	24
Fig. 31. Output data rate panel	25
Fig. 32. Switch protocol panel for binary data	25
Fig. 33. Switch protocol panel for NMEA data	26
Fig. 34. GPS almanac panel	26
Fig. 35. GLONASS almanac panel	26
Fig. 36. GPS ephemerides panel	27
Fig. 37. GLONASS ephemerides panel	27
Fig. 38. PPS parameters panel	28
Fig. 39. Enable/disable SV panel	28
Fig. 40. Enable/disable NMEA messages panel	28
Fig. 41. Receiver's response with enabled NMEA messages and their output rate	29
Fig. 42. Enable/disable binary messages panel	29
Fig. 43. Queries list	30
Fig. 44. Commands available for binary data	30
Fig. 45. Commands available for NMEA data	30
Fig. 46. Displaying receiver FW version and serial number	30
Fig. 47. Restart receiver panel for binary data	31
Fig. 48. Restart receiver panel for NMEA data	31
Fig. 49. Browsing the FW file to download	31

Fig. 50. FW update progressing	32
Fig. 51. File failed message	32
Fig. 52. Download failed message	32
Fig. 53. Update complete message.....	32
Fig. 54. Successful storing parameters into the Flash message.....	33
Fig. 55. Automatic COM port scanning.....	35
Fig. 56. Finding virtual COM port	36
Fig. 57. Virtual COM port properties	36

Scope

The document outlines functionality of «**GeoSDemo**®» demonstration SW as well as the way of its proper installation and use.

The document contains five chapters:

- [Chapter 1](#): general information about SW
- [Chapter 2](#): list of the abbreviations
- [Chapter 3](#): installation guide
- [Chapter 4](#): detailed description of program operation
- [Chapter 5](#): procedure of connecting SW to the receiver.

1. About

1.1. Introduction

GeoSDemo® (the program) is demonstration software for combined GPS/GLONASS OEM boards GeoS-1 and GeoS-1M (the receiver).

The program is able to:

- Automatic scan and detect active PC's RS232 and USB ports
- Display the receiver output navigation data
- Send the commands, queries, and settings to the receiver
- Display the receiver responses to the commands, queries, and settings
- Log the receiver output data to PC hard disc
- Read receiver log-files
- Record the report file that registers the events in the receiver operation
- Update the receiver FW.

GeoSDemo® is the Win32 application SW which runs on PC with Windows XP™, Windows Vista™, or Windows 7™ operation systems.

2. Abbreviations

The list of abbreviations used in the document:

Az:	Azimuth
DR:	Dead Reckoning
El:	Elevation
FW:	Firmware
PC:	Personal Computer
PPS:	Pulse Per Second
SNR:	Signal-to-Noise Ratio
SV:	Space Vehicle
SW:	Software

3. Installation Guide

«**setup.exe**» installer can be downloaded from the web site <http://geostar-navigation.com> (in zip format). Before installation, the file shall be unzipped. To start installation, please run «**setup.exe**». The first step is selection of the language (Fig. 1).

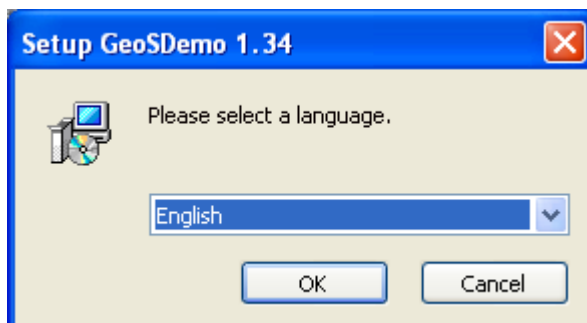


Fig. 1. Installation language select

For further proceed, follow the installer instructions (Fig. 2).

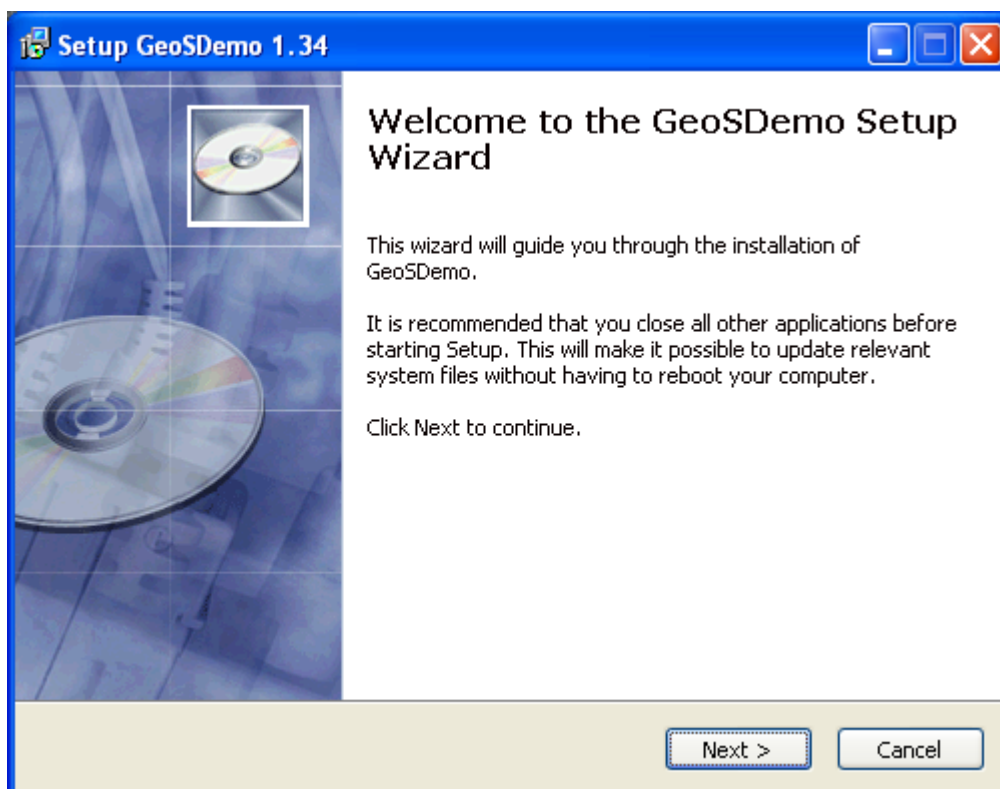


Fig. 2. Installer start window

Click «**Next**» (Fig. 3) to choose install location (default C:\Program files\Geostar-Navigation Ltd.\GeoSDemo).

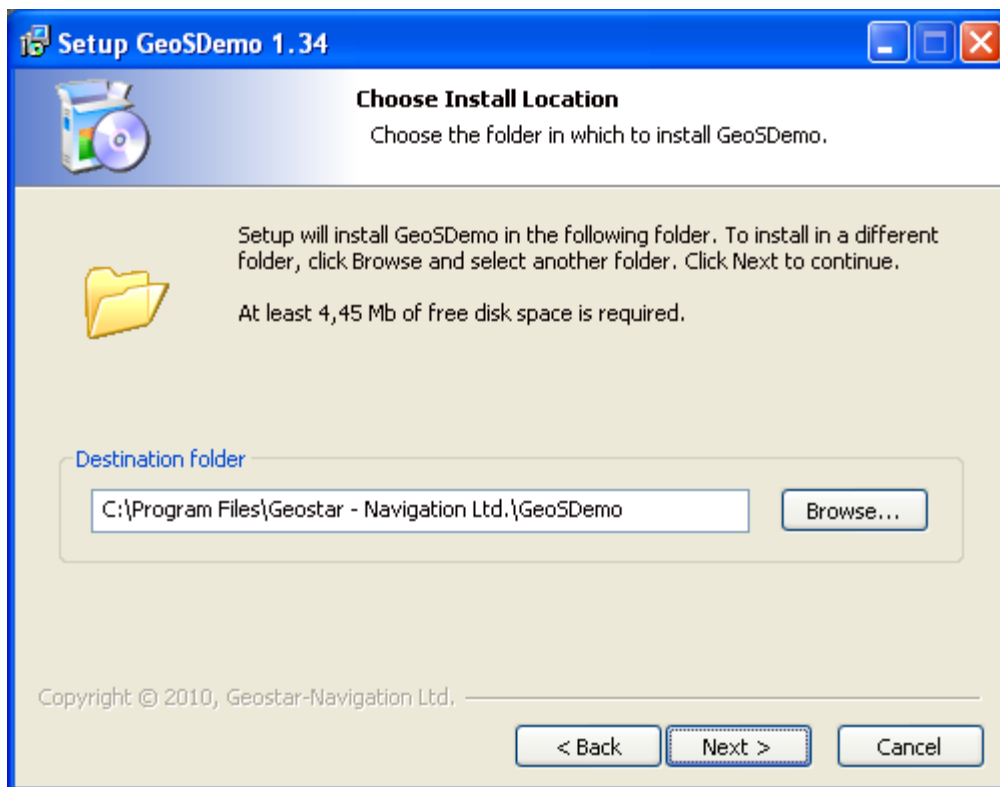


Fig. 3. Choosing install location

In the next window (Fig. 4) please select a start menu folder for «GeosDemo» shortcuts.

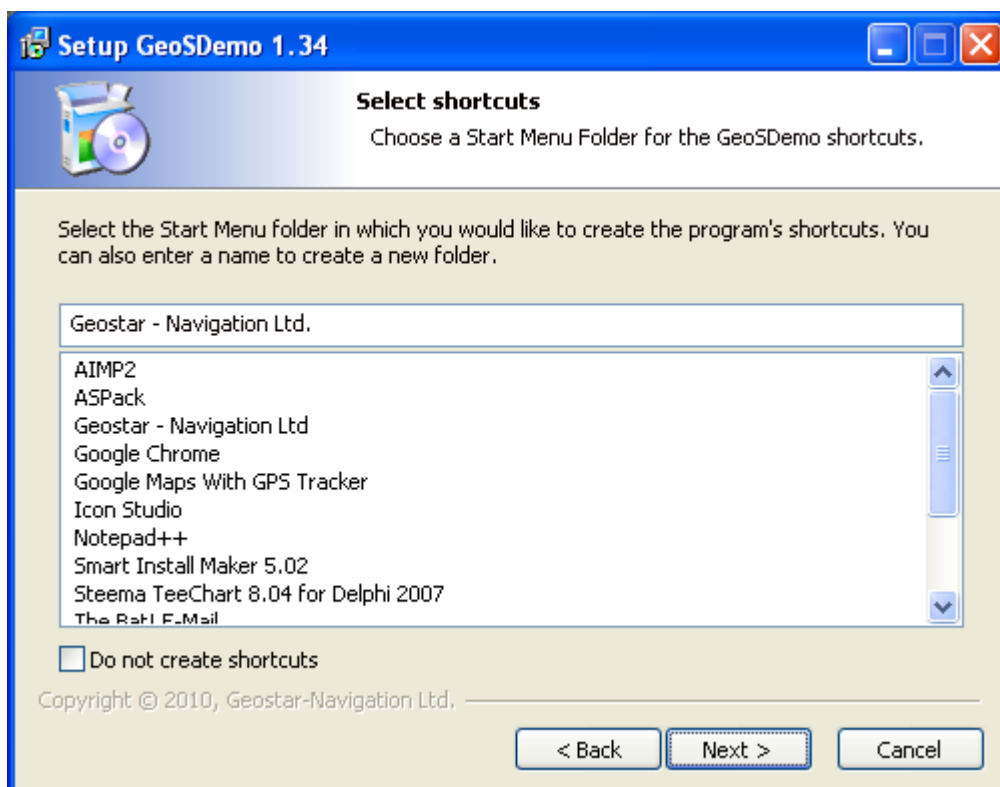


Fig. 4. Selecting a start menu folder

Click «Install» in «Ready to Install» window (Fig. 5) to begin installation.

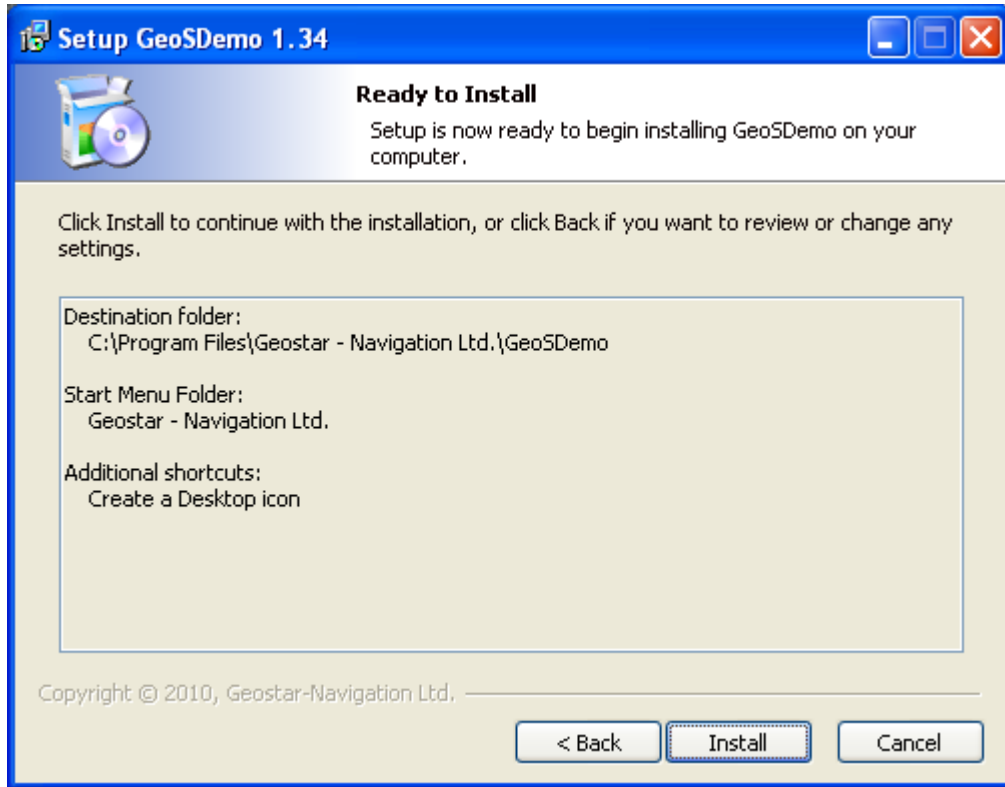


Fig. 5. Ready to install window

Fig. 6 shows the progress of USB driver installation, **don't close it**. It will be closed automatically after installation completed.

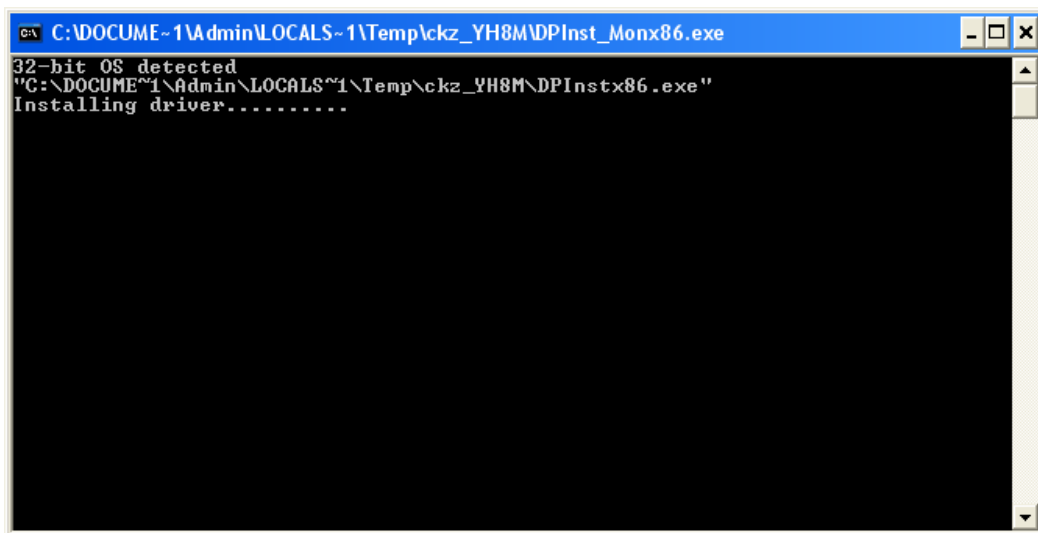


Fig. 6. Installing USB driver window

When setup is complete (Fig. 7), click «Finish». By checking «Visit product web site», you can go to <http://geostar-navigation.com> web site.



Fig. 7. Setup complete window

The following shortcut has been created by installer on the PC's Desktop:



To run program, double click on the shortcut or go to «**Start**» → «**Programs**» → «**Geostar – Navigation Ltd**» → «**GeoSDemo**».

4. Operation

4.1. How to Connect to the Receiver

«**How to connect**» window (Fig. 8) is the starting window that provides options of connecting to the receiver (real-time operation mode). Three options are available as follows:

1. Automatic scan of the active computer ports (RS232 and USB)
2. Manual assignment of specific computer port
3. Use of the last active computer ports configuration.

In addition, the program can be set to read data from previously saved log-file (non real-time operation mode). This option can be selected by checking «**Reading from file**».

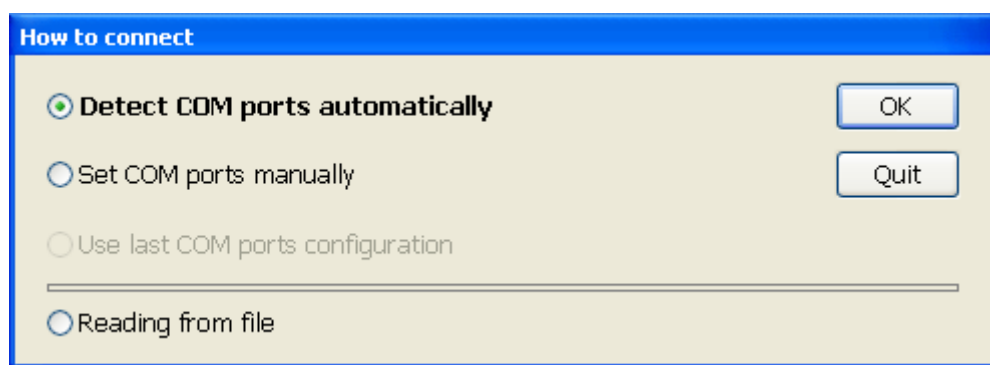


Fig. 8. Choosing the way of connection

4.1.1 Detect COM port automatically

After choosing this option, the program will scan all available PC's serial ports automatically in order to detect active port connected to the receiver. For USB enabled receivers, the communication with receiver is established via virtual COM port. Virtual COM port is generated by USB driver of computer's operating system. The number of valid COM port is displayed in the status bar of main program window (Fig. 10).

4.1.2 Set COM ports manually

When choosing this option, the port number and port settings could be set manually in «**Main settings**» window (Fig. 9).

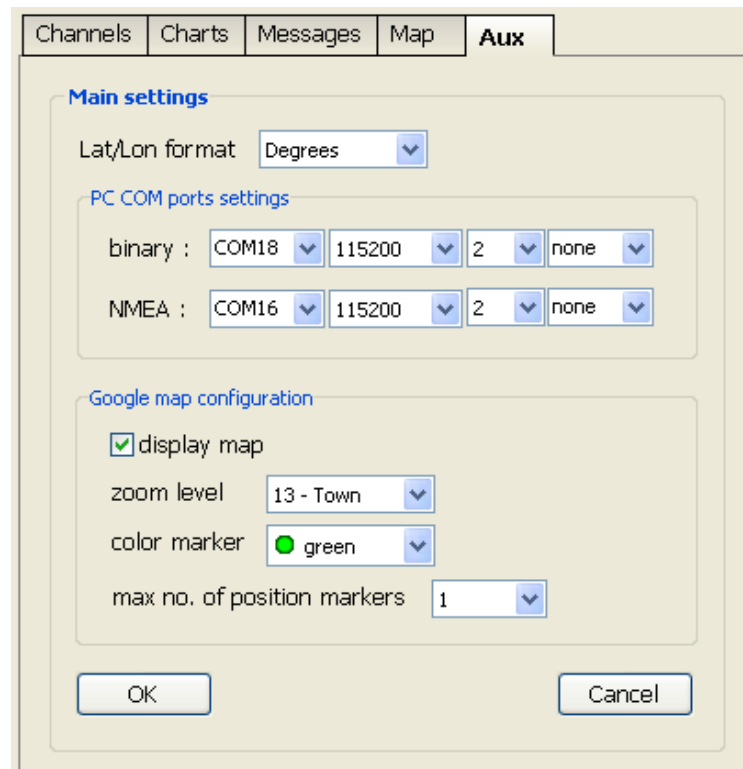


Fig. 9. Main settings window

For USB enabled receiver, the virtual COM port number (COM8 in Fig. 9) and baud rate 115200bit/s should be set. In addition, the window provides the options that allow selecting format of displayed Lat/Lon data and configuring Google Maps.

The procedure of connecting to the receiver is described in detail in [Chapter 5](#).

4.1.3 Use last COM ports configuration

When choosing this option, the program will use COM ports configuration already used during previous connection session (this option is unavailable at the first connect).

4.1.4 Reading from file

When chosen, the program will be set to read log-files.

4.2. Main Window

The main window includes few data panels as shown in Fig. 10.

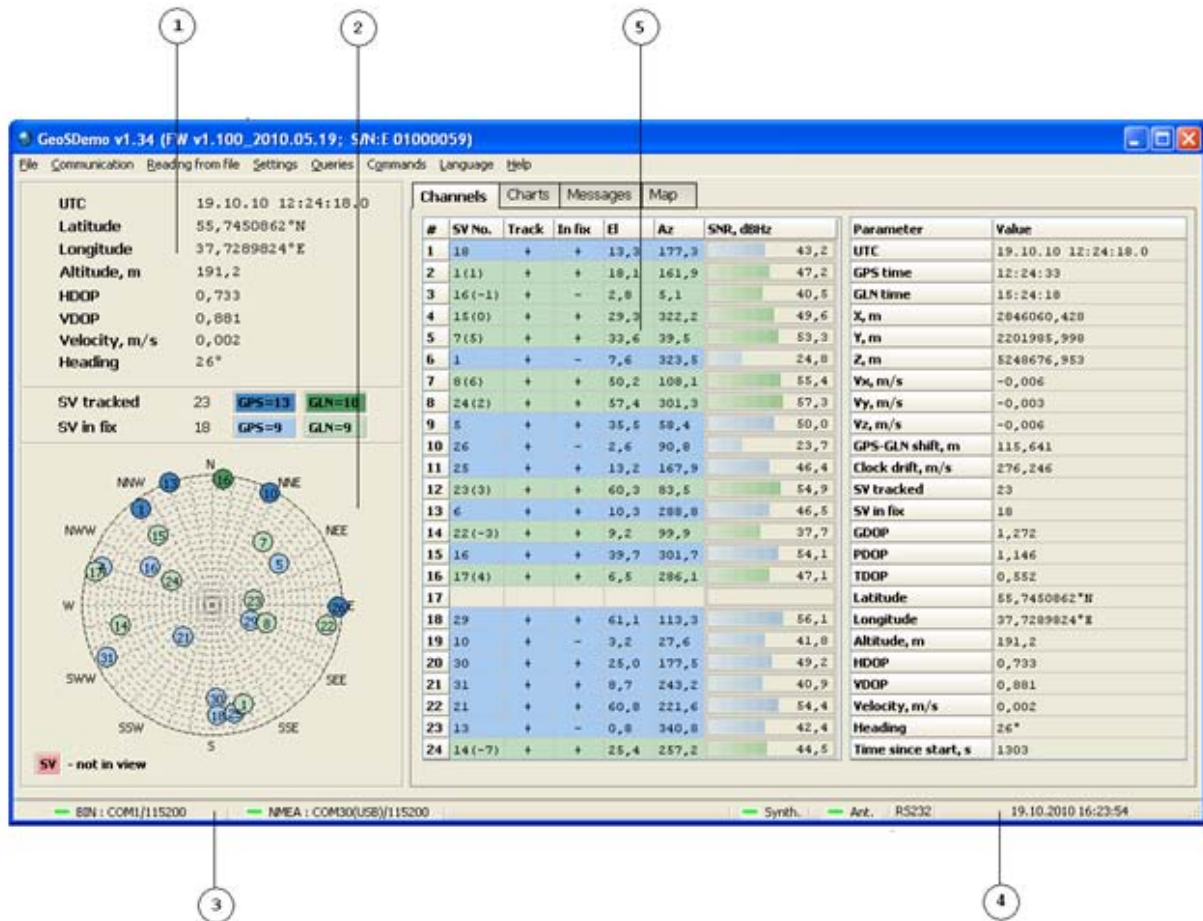


Fig. 10. Main program window

1. Brief navigation data panel (Fig. 11) displays UTC, Latitude/Longitude/Altitude, Velocity (Ground Speed), Heading, DOPs.

UTC	19.10.10 12:25:45.0
Latitude	55,7450616°N
Longitude	37,7289631°E
Altitude, m	194,3
HDOP	0,732
VDOP	0,879
Velocity, m/s	0,017
Heading	181°

Fig. 11. Brief navigation data panel

2. Sky chart (Fig. 12) displays the SVs in view of both satellite systems. The figure in circle is system SV number. The circle color identifies the satellite system and SV status in following manner:

- GPS SVs are blue: dark blue identifies SVs tracked, light blue – SVs in fix
- GLONASS SVs are green: dark green identifies SVs tracked, light green – SVs in fix

- SVs not in fix are pink.

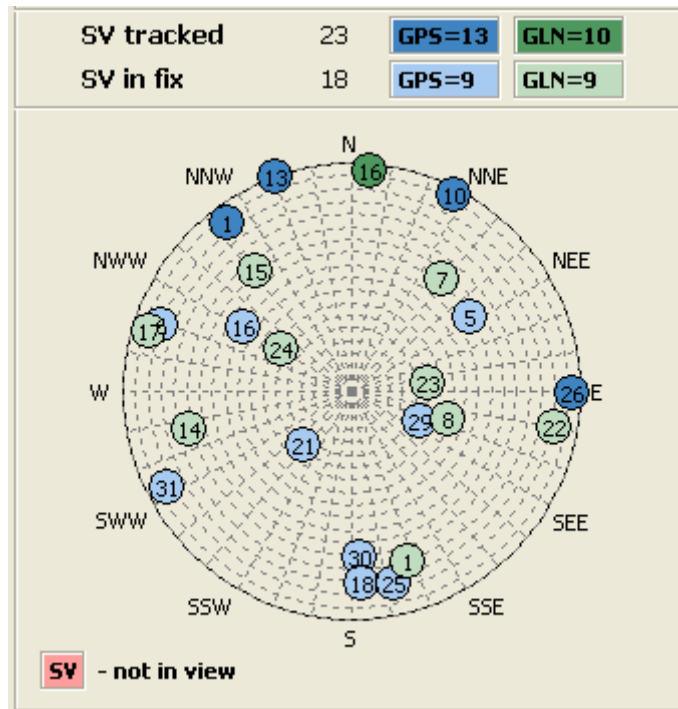


Fig. 12. Map of SVs in the sky

3. Status bar, left side indicates PC's serial ports parameters (COM port number and baud rate) individually for binary and NMEA protocols (Fig. 13). The colors of indicators have the following meanings:

- If the port is active then indicator is bright green and displays COM port number and baud rate
- If the port is inactive then indicator is dark green and shows «Disconnect» message.



Fig. 13. Status bar

Identifier «(USB)» means that connection to the receiver is accomplished through virtual COM port that has been generated by USB driver of operating system.

4. Status bar, right side indicates:
- System (local) time and date
 - Receiver hardware telemetry. «Synth.» indicator represents frequency synthesizer telemetry status. «Ant.» indicator represents antenna supply voltage telemetry status. Green indicator denotes OK, red indicator – failed.
 - Receiver hardware option: USB enabled/without USB, 1Hz/5Hz.
5. Combination of four bookmarks: «Channels», «Chart», «Messages», and «Map».

4.3. Channels

The «Channels» bookmark depicts the channels data (SV number, status of tracking and use in fix, Elevation, Azimuth, SNR) and extended navigation data. The bookmark looks in different ways depending on the type of connection data protocol. For binary data, the bookmark looks as shown in Fig. 14. Blue color identifies GPS SVs, green color identifies GLONASS SVs.

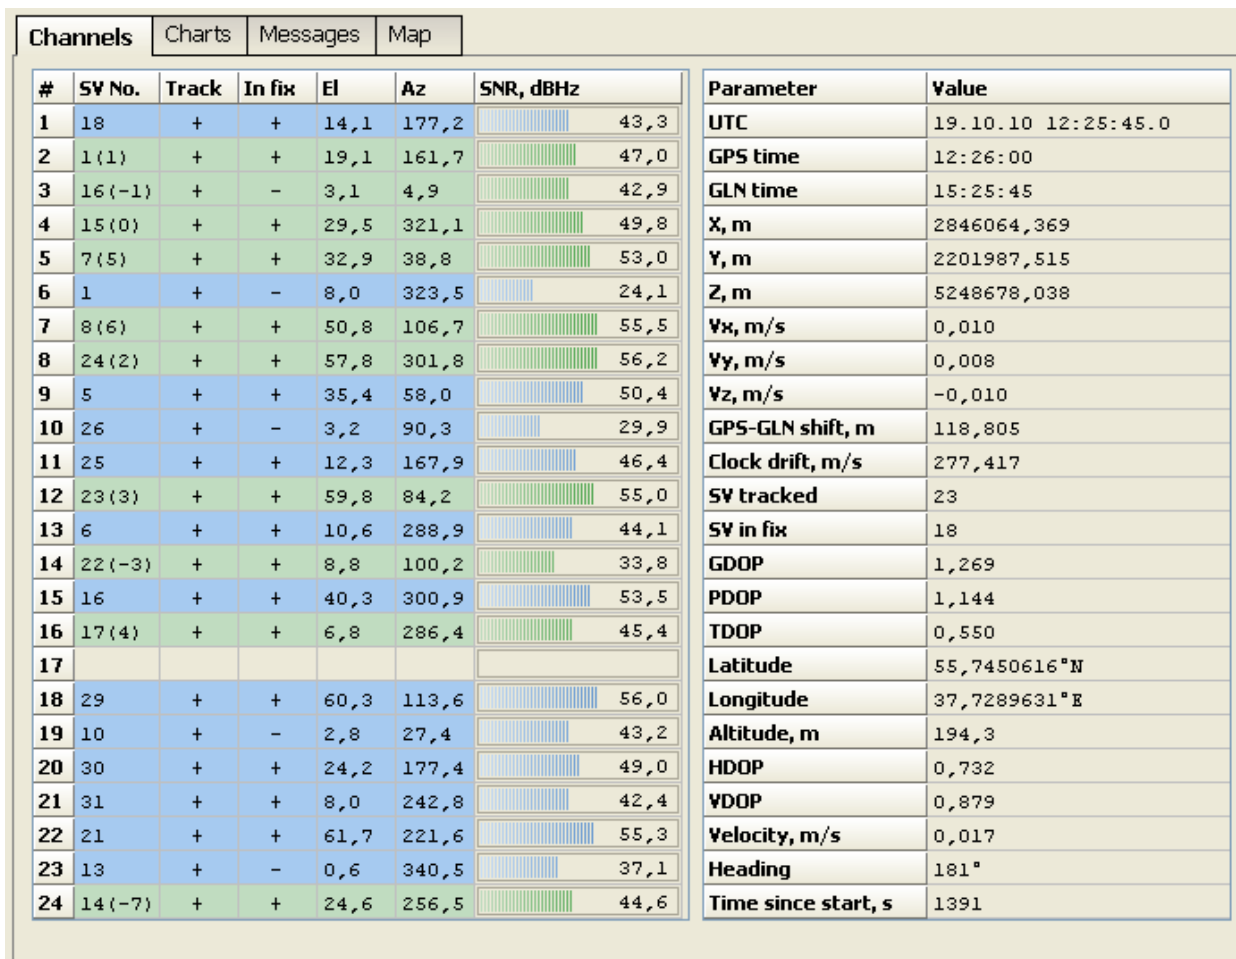


Fig. 14. Channels bookmark for binary data

For NMEA data, the bookmark looks as shown in Fig. 15.




 

 


 

 

 
 
 
 
 




 

Channels							Charts	Messages	Map
#	SV No.	Track	In fix	El	Az	SNR, dBHz	Parameter	Value	
1	1	+	-	8	323	 24	UTC	19.10.10 12:27:32.0	
2	5	+	+	34	57	 49	GPS time		
3	6	+	+	11	289	 44	GLN time		
4	10	+	-	2	27	 41	X, m		
5	13	+	-	0	339	 35	Y, m		
6	16	+	+	40	300	 54	Z, m		
7	18	+	+	14	177	 44	Vx, m/s		
8	21	+	+	62	221	 55	Vy, m/s		
9	25	+	+	11	167	 46	Vz, m/s		
10	26	+	-	3	89	 28	GPS-GLN shift, m		
11	29	+	+	59	114	 55	Clock drift, m/s		
12	30	+	+	23	177	 49	SV tracked	23	
13	31	+	+	7	242	 43	SV in fix	12	
14	1(*)	+	+	20	161	 49	GDOP		
15	7(*)	+	+	32	38	 51	PDOP	1,1	
16	8(*)	+	-	51	105	 55	TDOP		
17	14(*)	+	-	24	256	 43	Latitude	55,7451000°N	
18	15(*)	+	+	29	320	 49	Longitude	37,7289483°E	
19	16(*)	+	-	3	4	 46	Altitude, m	191,7	
20	17(*)	+	-	7	286	 43	HDOP	0,7	
21	22(*)	+	-	8	100	 31	VDOP	0,9	
22	23(*)	+	-	59	85	 54	Velocity, m/s	0,007	
23	24(*)	+	-	58	302	 56	Heading	96°	
24							Time since start, s		

Fig. 15. Channels bookmark for NMEA data

4.4. Charts

The «Charts» bookmark presents four diagrams: X/Y coordinates, Altitude, Velocity (ground speed), and number of SV in fix as a function of time. Each chart displays 300 points only, after that data is cleared. To clear charts manually, double click at X/Y diagram (Fig. 16).




Fig. 16. Charts bookmark

4.5. Messages

The «Messages» bookmark combines two text sub-windows (Fig. 17).

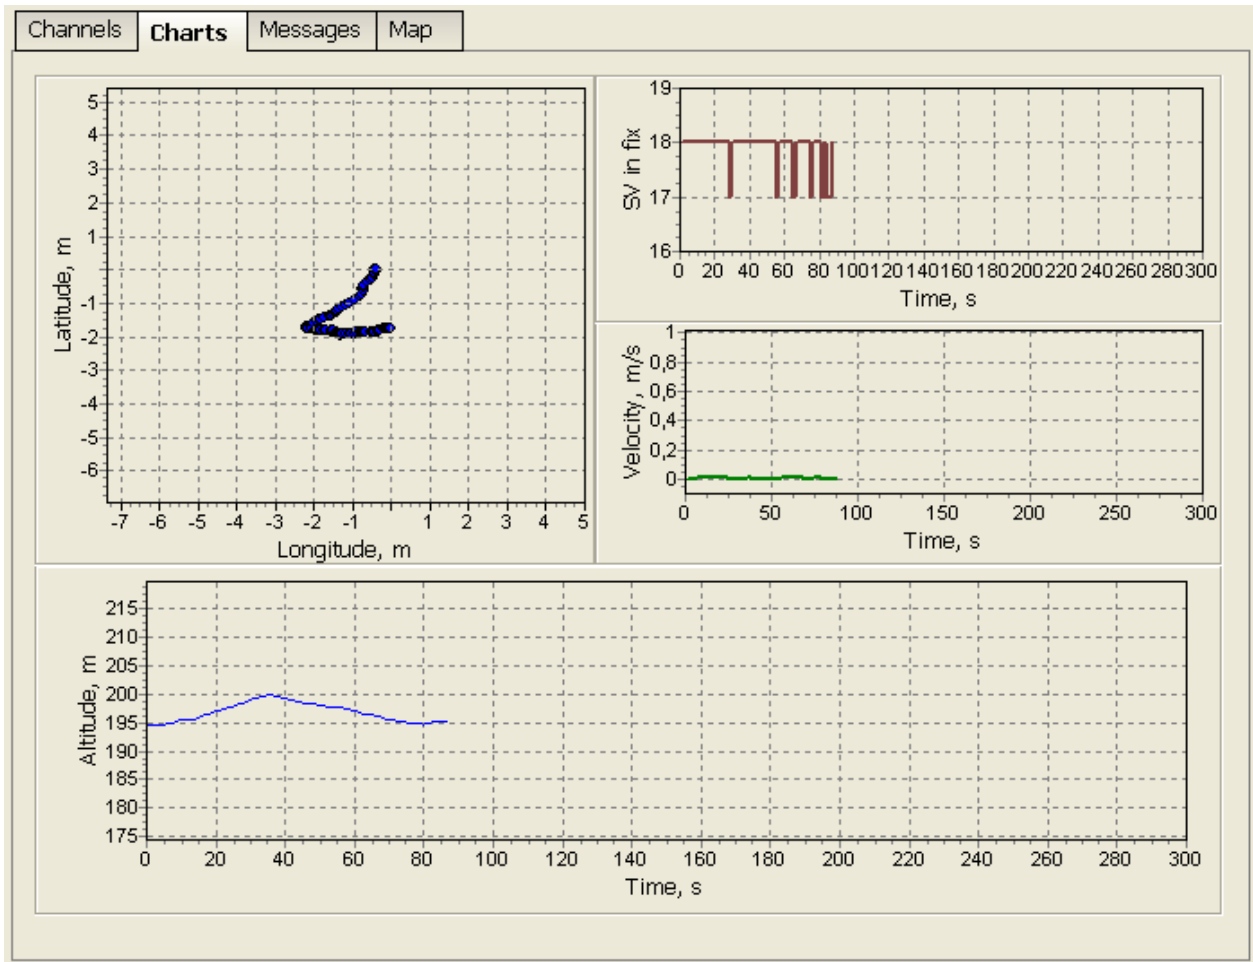


Fig. 17. Messages bookmark

Upper window relates to the binary data and presents receiver’s responses to command, query or setting entries as well as messages about receiving almanacs and ephemerides. Each message contains system time and number for its identification. Lower window prints receiver’s output NMEA messages.

There is a capability to enable logging both binary and NMEA data by checking corresponded options. Binary and NMEA data will be saved to separate log-files. Names of log-files are generated automatically based on system time and date.

4.6. Map

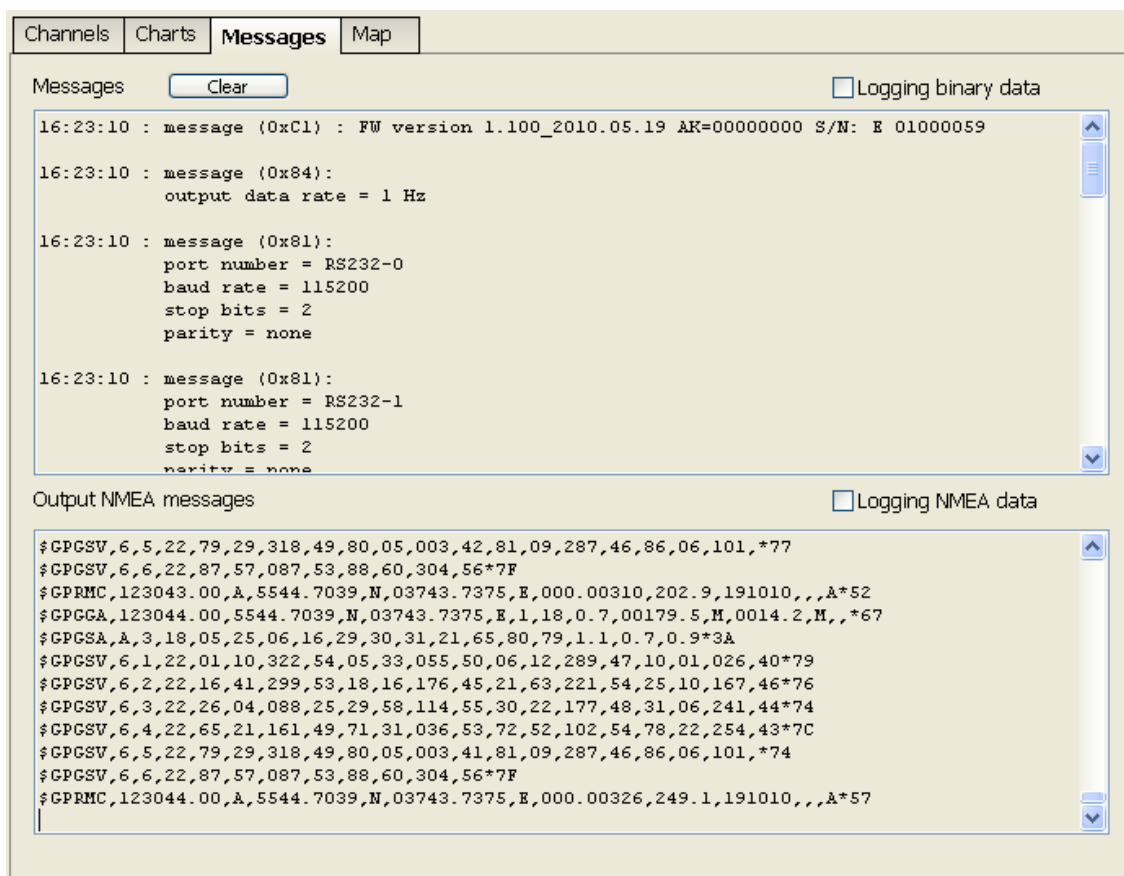The «Map» bookmark displays user location on the world map provided that the receiver outputs position fix data. If computer with **GeoSDemo**® is accessed to the Internet then location appears on Google Maps (Fig. 18).

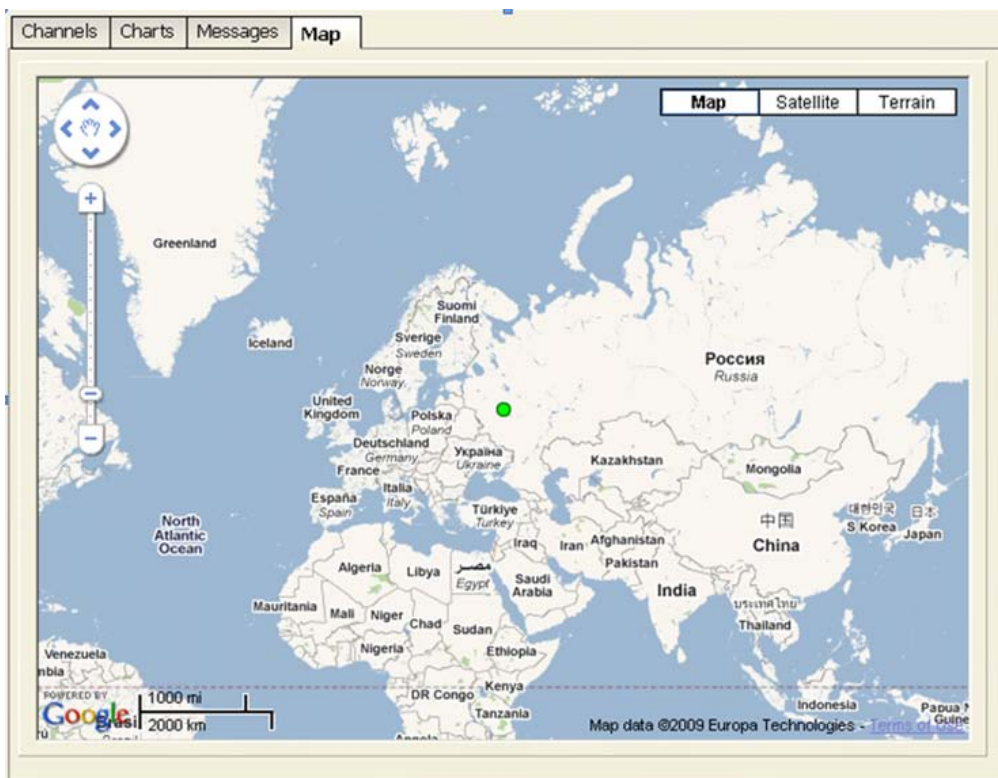


Fig. 18. Displaying position fix data on Google Maps

If computer is not connected to the Internet then location is displayed on a simplified world map (Fig. 19).

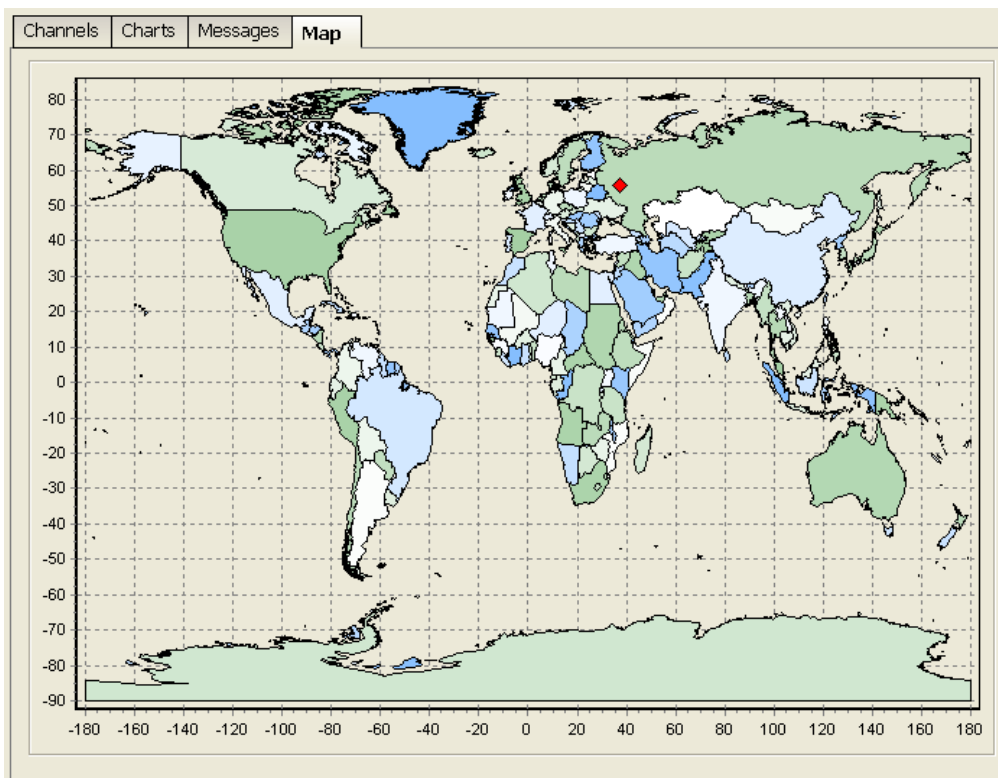


Fig. 19. Displaying position fix data on a simplified map

4.7. Menu Bar

The main window menu bar is shown in Fig. 20.



Fig. 20. Menu bar

4.7.1 File

«**File**» item (Fig. 21) has three options. «**Main settings**» options is described in section [4.1.2](#). When choosing «**Save report**» option, the data from upper window of «**Messages**» bookmark will be saved to the text file; the file will be created in program root directory. Click «**Quit**» to close the program.

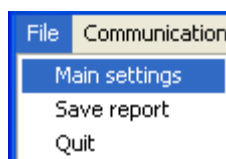


Fig. 21. File item

4.7.2 Communication

«**Communication**» item (Fig. 22) allows the user connecting to or disconnecting from the receiver.

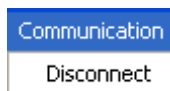


Fig. 22. Communication item

4.7.3 Reading from file

By using «**Reading from file**» user can read the log-files. When choosing this item, the additional panel «**Reading from file**» appears (Fig. 23). Log-files should have extension *.tim. The log-file should be located in program root directory in folder «data/». By setting different reading rate (in ms), user can vary rate of updating data on computer monitor. By using checkbox «**repeat**», reading log-file can be recycled.

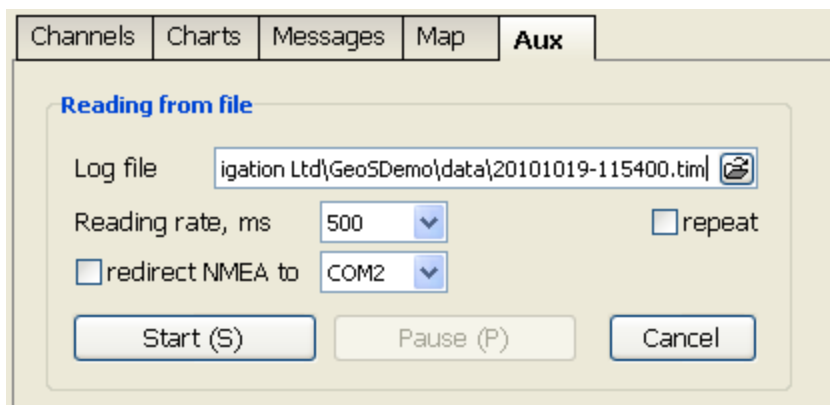


Fig. 23. Reading from file parameters

The checkbox «**redirect NMEA to**» enables redirection of NMEA data to selected COM port at fixed baud rate 57600bit/s.

During reading log-file the time/date from the file is displayed in the status bar (Fig. 24).

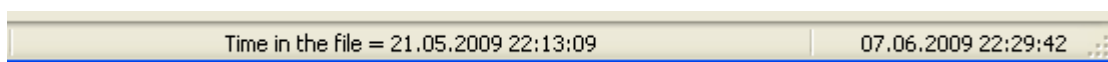


Fig. 24. Time/date from the file

To begin reading, press «**Start**». Press «**Stop**» to cancel reading. Pressing «**Cancel**» makes the program operate in normal mode.

4.7.4 Settings

Selection of each item in «**Settings**» opens aux panel with parameters to define. Pressing «**OK**» sends parameters to the receiver. Pressing «**Cancel**» will close the window without sending data to the receiver. Once the sending is done, the receiver sends back the reply which can be read in upper text sub-window of «**Messages**» bookmark. For binary data, the list of settings is shown in Fig. 25.

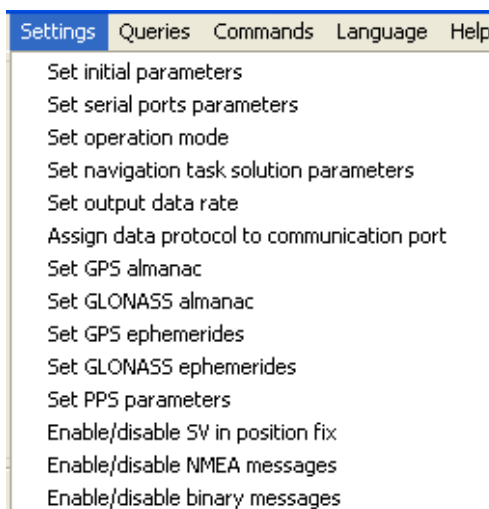


Fig. 25. Settings list for binary data

For NMEA data, the list of settings is shown in Fig. 26.

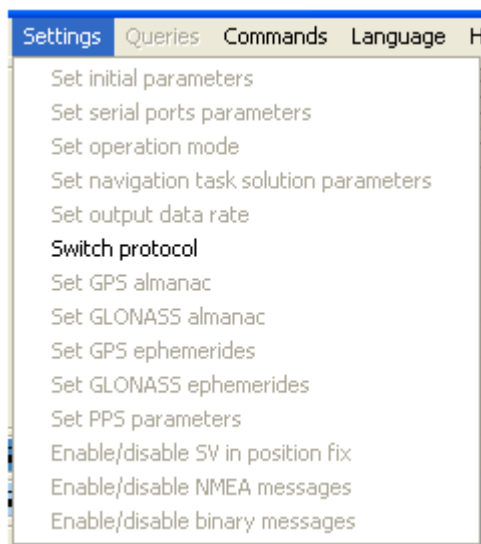


Fig. 26. Settings list for NMEA data

4.7.4.1 Set initial parameters

Selection of «**Set initial parameters**» opens aux panel as shown in Fig. 27. The receiver utilizes initial time, coordinates, clock drift and GLONASS-GPS time shift parameters in order to reduce time to first fix. Additionally, XYZ data are used as reference coordinates in coordinates hold mode.

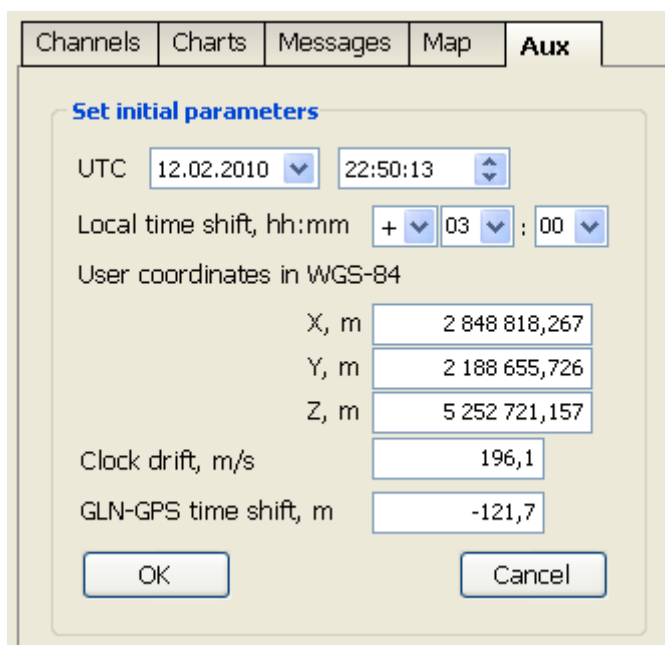


Fig. 27. Set initial parameters panel

4.7.4.2 Set serial port parameters

Selection of «**Serial port parameters**» opens aux panel as shown in Fig. 28. Changing port parameters will make the receiver restart.

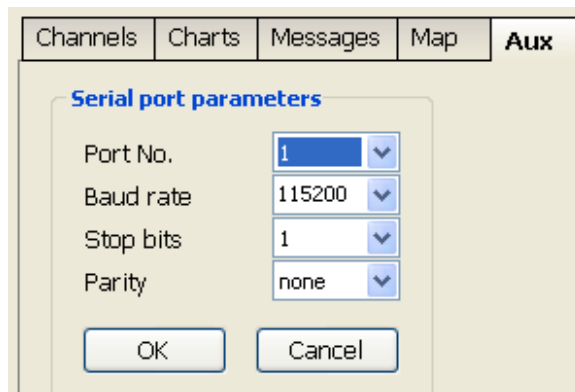


Fig. 28. Serial port parameters panel

4.7.4.3 Set operation mode

Selection of «**Set operation mode**» opens aux panel as shown in Fig.29. Here user can enable or disable 2D mode, set satellite system (GPS only, GLONASS only, GPS+GLONASS), set coordinates hold mode.

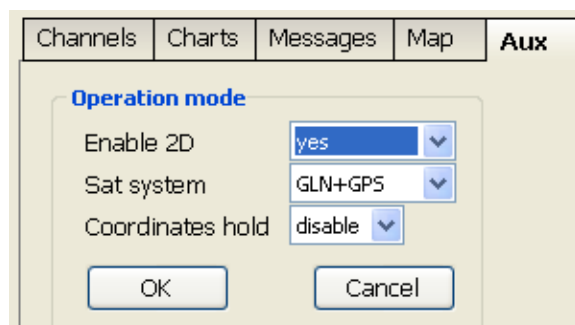


Fig. 29. Operation mode panel

4.7.4.4 Set navigation task solution parameters

Selection of «**Set navigation task solution parameters**» opens aux panel as shown in Fig. 30. Here user can set GDOP and elevation masks, enable or disable dynamic filter, set dead reckoning parameters.

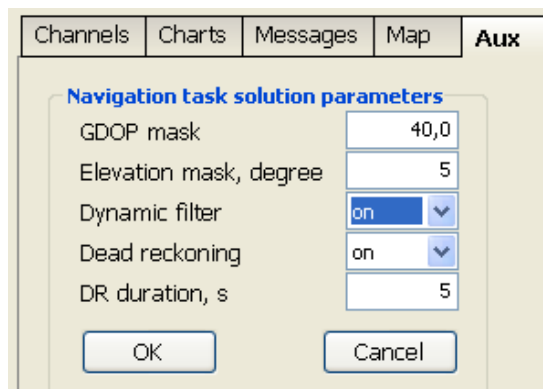


Fig. 30. Navigation task solution parameters panel

4.7.4.5 Set output data rate

Selection of «**Set output data rate**» opens aux panel as shown in Fig. 31. There are two options to choose from: 1Hz and 5Hz.

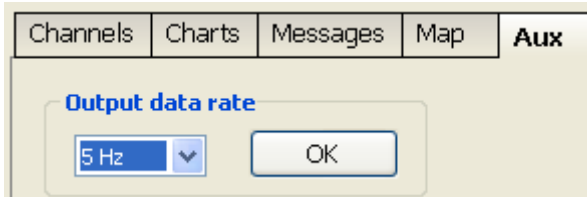


Fig. 31. Output data rate panel

4.7.4.6 Assign data protocol to communication port

For binary data, selection of «**Assign data protocol to communication port**» opens aux panel as shown in Fig. 32. There are two options available: Port #0 outputs binary data/Port #1 outputs NMEA data, and Port #0 outputs NMEA data/Port #1 outputs binary data.

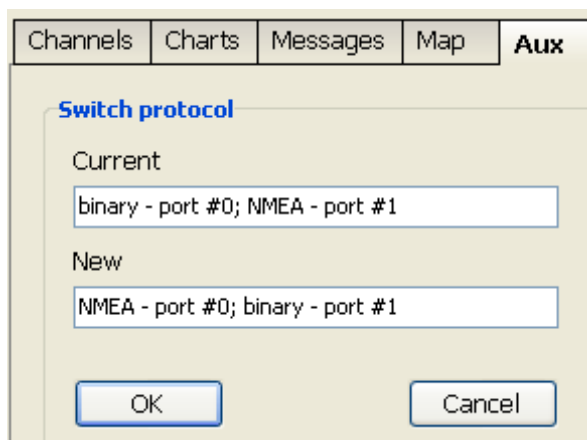


Fig. 32. Switch protocol panel for binary data

As Fig. 32 illustrates, Port #0 is assigned to binary data and Port #1 – to NMEA. After clicking «**OK**», Port #0 will output NMEA data and Port #1 – binary data.

For NMEA data, selection of «**Assign data protocol to communication port**» opens aux panel as shown in Fig. 33.

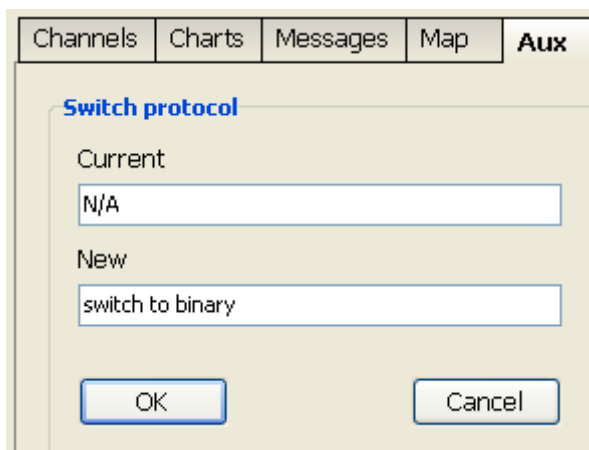


Fig. 33. Switch protocol panel for NMEA data

4.7.4.7 Set GPS almanac

Selection of «Set GPS almanac» opens aux panel as shown in Fig. 34.

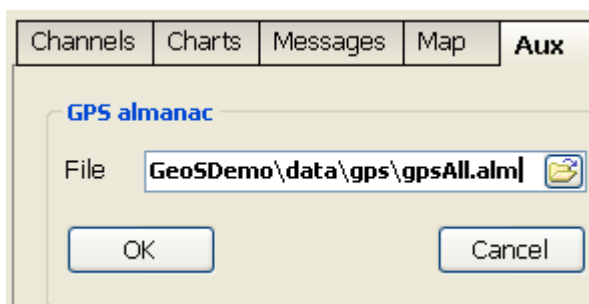


Fig. 34. GPS almanac panel

To download GPS almanac to the receiver, choose «gpsAll.alm» file location and press «OK».

4.7.4.8 Set GLONASS almanac

Selection of «Set GLONASS almanac» opens aux panel as shown in Fig. 35.

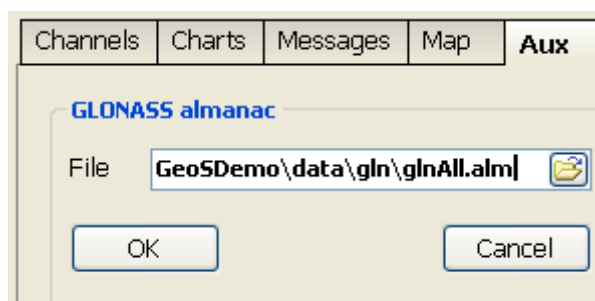


Fig. 35. GLONASS almanac panel

To download GLONASS almanac to the receiver, choose «glnAll.alm» file location and press «OK».

4.7.4.9 Set GPS ephemerides

Selection of «**Set GPS ephemerides**» opens aux panel as shown in Fig. 36.

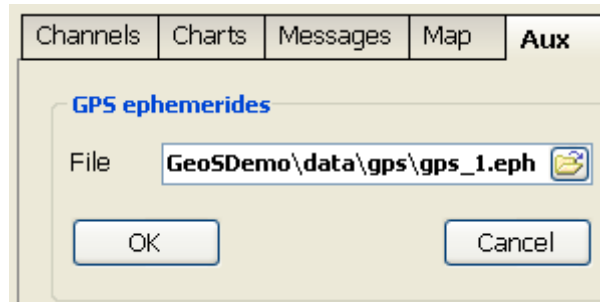


Fig. 36. GPS ephemerides panel

To download GPS ephemerides of specified SV (one of 32), choose «**gps_*.eph**» file location and press «**OK**».

4.7.4.10 Set GLONASS ephemerides

Selection of «**Set GLONASS ephemerides**» opens aux panel as shown in Fig. 37.

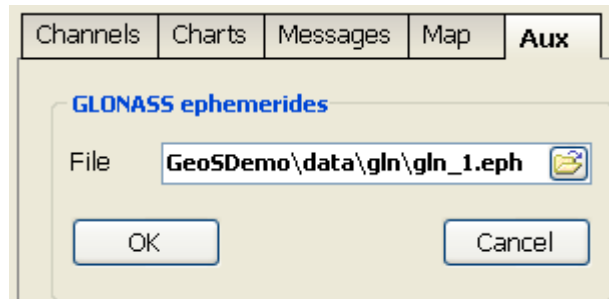


Fig. 37. GLONASS ephemerides panel

To download GLONASS ephemerides of specified SV (one of 24), choose «**gln_*.eph**» file location and press «**OK**».

4.7.4.11 Set PPS parameters

Selection of «**Set PPS parameters**» opens aux panel as shown in Fig. 38. Here user can set following PPS parameters: enable/disable PPS output, polarity, synchronization time scale, pulse duration, and shift.

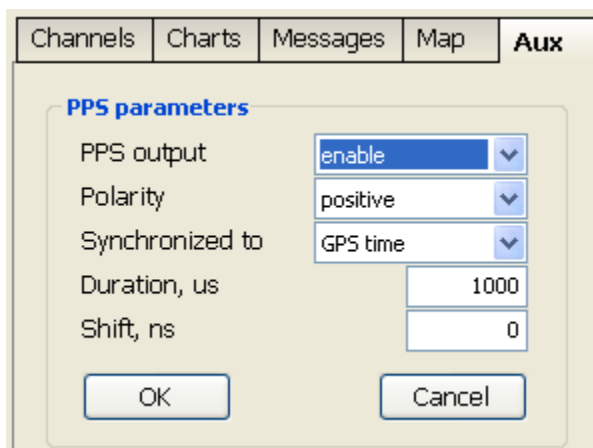


Fig. 38. PPS parameters panel

4.7.4.12 Enable/disable SV in position fix

Selection of «**Enable/disable SV in position fix**» opens aux panel as shown in Fig. 39. Here user can disable (and enable it back) any SV of GPS or GLONASS constellation.

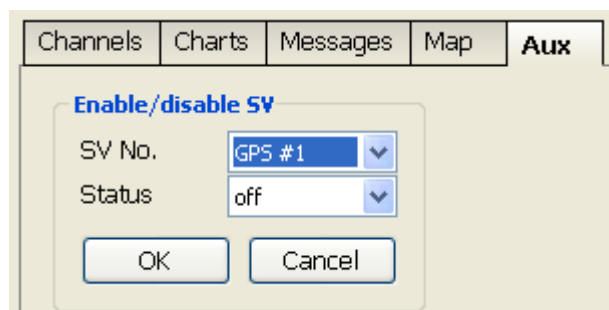


Fig. 39. Enable/disable SV panel

4.7.4.13 Enable/disable NMEA messages

Selection of «**Enable/disable NMEA messages**» opens aux panel as shown in Fig. 40. Here user can control the output for seven NMEA messages: GGA, GSA, GSV, RMC, VTG, GLL, and ZDA. To enable specific message, set the check; to disable message – remove the check. In addition, the prefix of NMEA messages could be chosen here.

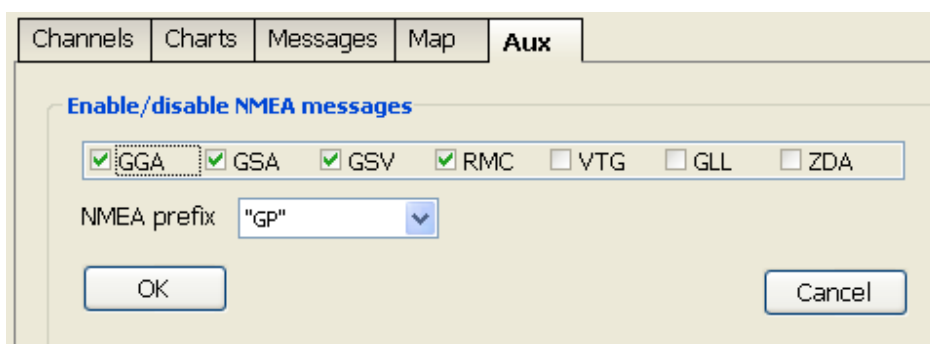


Fig. 40. Enable/disable NMEA messages panel

As a response to the settings «**Enable/disable NMEA messages**», «**Serial port parameters**», and «**Set output data rate**» the receiver outputs message with enabled NMEA messages and their output rate (Fig. 41).

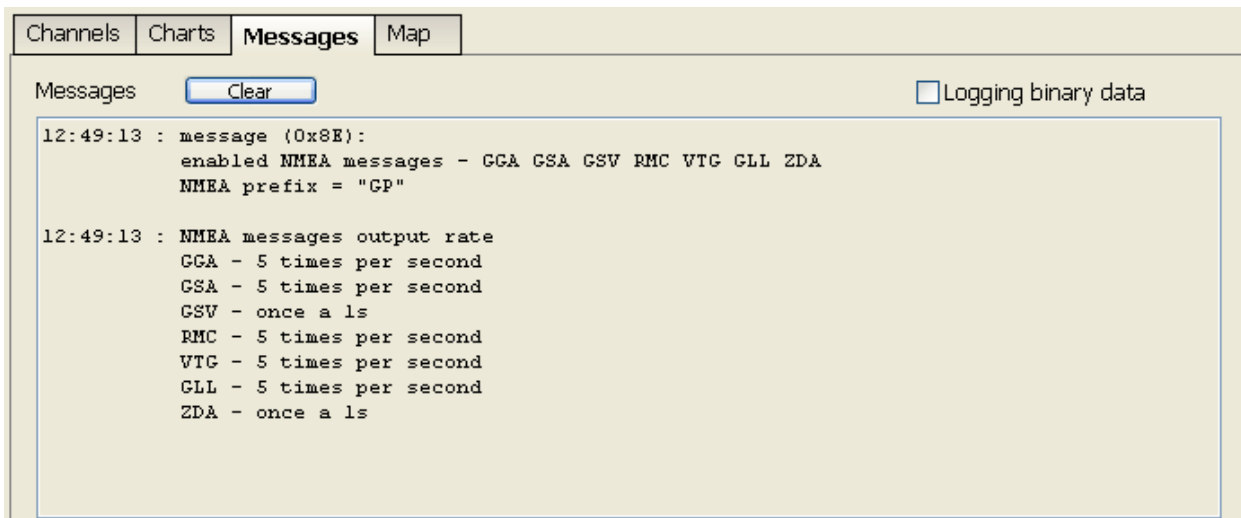


Fig. 41. Receiver’s response with enabled NMEA messages and their output rate

4.7.4.14 Enable/disable binary messages

Selection of «**Enable/disable binary messages**» opens aux panel as shown in Fig. 42. Here user can control the binary messages output. Similar to NMEA messages control, use checkboxes to enable/disable specific binary message.

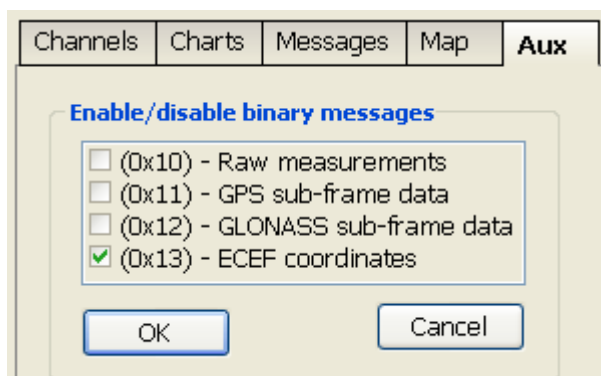


Fig. 42. Enable/disable binary messages panel

4.7.5 Queries

The list of «**Queries**» is shown in Fig. 43. Selection of each item will send related request to the receiver. After receiving request, the receiver sends back the response that can be read in upper window of «**Messages**» bookmark.

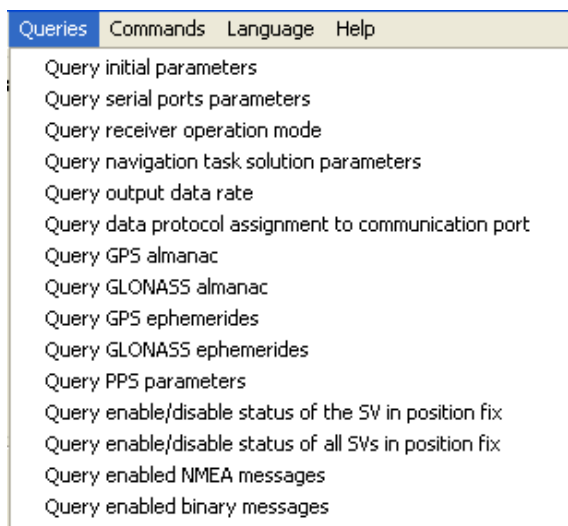


Fig. 43. Queries list

4.7.6 Commands

«**Commands**» item has four options for binary data (Fig. 44) and two options for NMEA data (Fig. 45). With these commands, user can request receiver FW version, restart receiver, update receiver FW, and store main parameters to Flash.

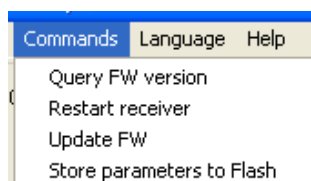


Fig. 44. Commands available for binary data

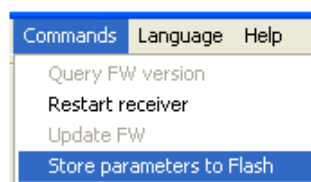


Fig. 45. Commands available for NMEA data

4.7.6.1 Query FW version

Selection of «**Query FW version**» sends the related command to the receiver. The receiver's response (upper window of «**Messages**» bookmark) includes firmware version, hardware option, and serial number. The FW version (with date) and receiver serial number are presented in the main window headline as shown in Fig. 46. Hardware option is displayed on the right of status bar.



Fig. 46. Displaying receiver FW version and serial number

As shown in Fig. 46 example, the receiver FW version is 1.100 dated 19 May 2010 and serial number is E01000059.

4.7.6.2 Restart receiver

Selection of «**Restart receiver**» opens aux panel as shown in Fig. 47 for binary data and Fig. 48 for NMEA data. Here user can restart the receiver in hot, warm, or cold start as well as restore default FW settings.

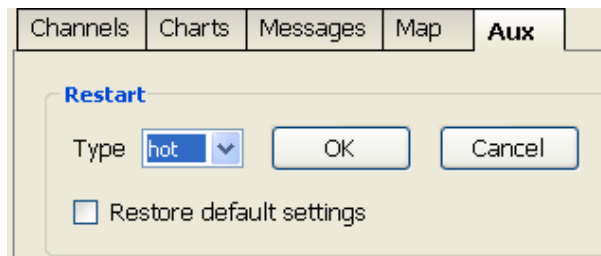


Fig. 47. Restart receiver panel for binary data

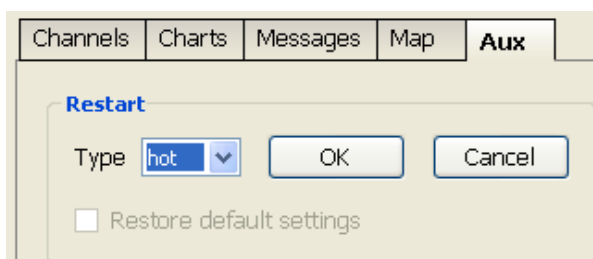


Fig. 48. Restart receiver panel for NMEA data

4.7.6.3 Update FW

Selection of «**Update FW**» opens aux panel as shown in Fig. 49 for browsing the file to download. The file should have extension *.bin.

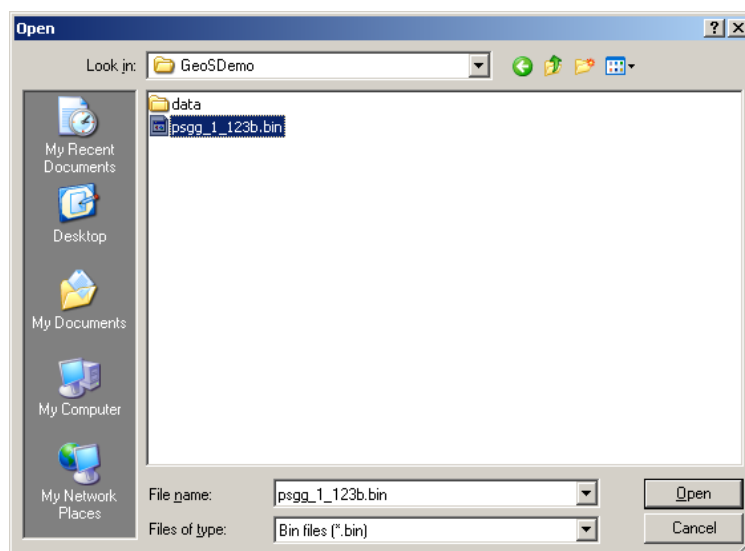


Fig. 49. Browsing the FW file to download

If the file to be loaded is correct, the program will start updating as shown in Fig. 50.

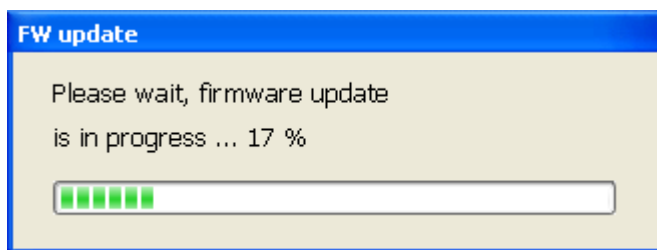


Fig. 50. FW update progressing

If the file that has been chosen is incorrect or failed, the program will generate the following message (Fig. 51).

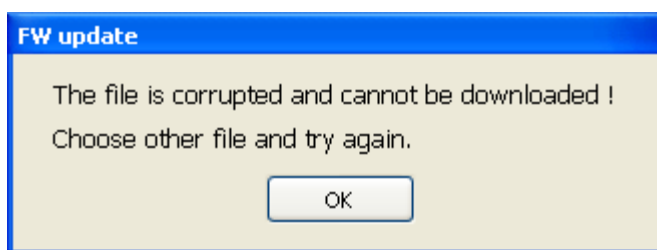


Fig. 51. File failed message

If the error occurred while downloading, the program will generate the following message (Fig. 52).

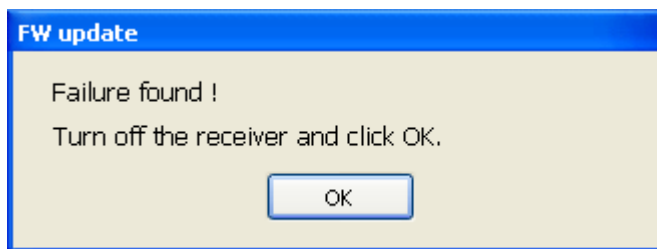


Fig. 52. Download failed message

If update has been finished successfully, then following message will appear (Fig. 53).

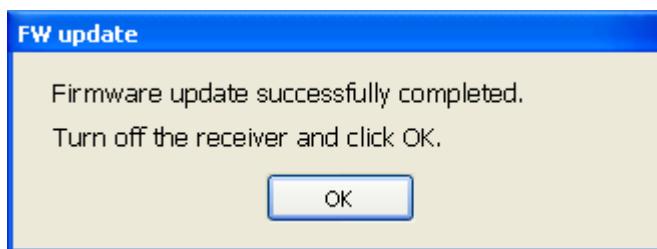


Fig. 53. Update complete message

4.7.6.4 Store parameters to Flash

Selection of «**Store parameters to Flash**» sends the related command to the receiver. After releasing the command, current active FW settings and satellite almanacs will be stored into the Flash memory. Saving FW setting and almanacs takes approximately 1...2 seconds.

For binary data, in case of successful storing the receiver sends back the message (Fig. 54) displayed in upper sub-window of «**Messages**» bookmark.

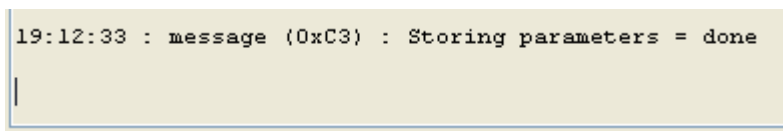


Fig. 54. Successful storing parameters into the Flash message

For NMEA data, in case of successful storing the receiver doesn't send back any message.

4.7.7 Update check

To check **GeoSDemo**[®] or FW updates, please select «**Help**» → «**Update check**» (Fig. 55). For that, the computer should be connected to the Internet.

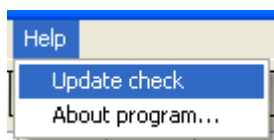


Fig. 1. Update check

The program will automatically connect to the manufacturer site <http://geostar-navigation.com> to check about available updates (Fig. 56).

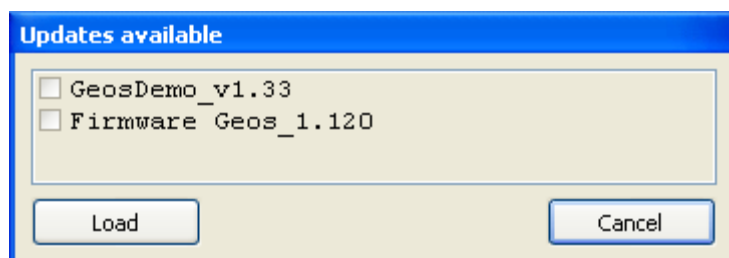


Fig. 2. Message about available updates

If no updates are available, the following message will appear (Fig. 57).

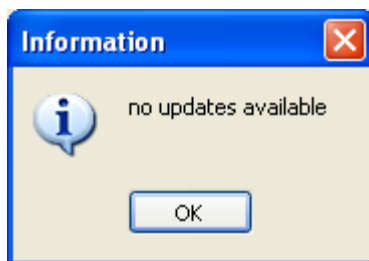


Fig. 3. No updates message

To load update, select it by checkbox and click «**Load**». The program will start downloading (Fig. 58).

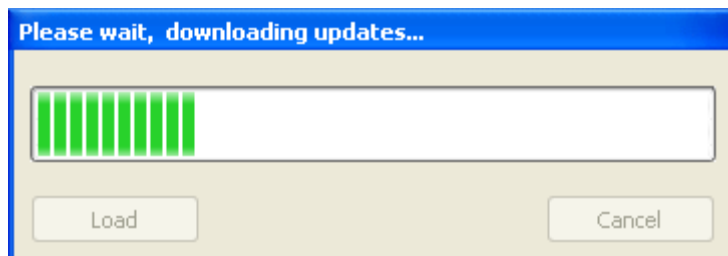


Fig. 4. Downloading updates

If download has been completed successfully, the message «**Done**» will be displayed (Fig. 59). If download failed, the message «**Failed**» will be displayed.

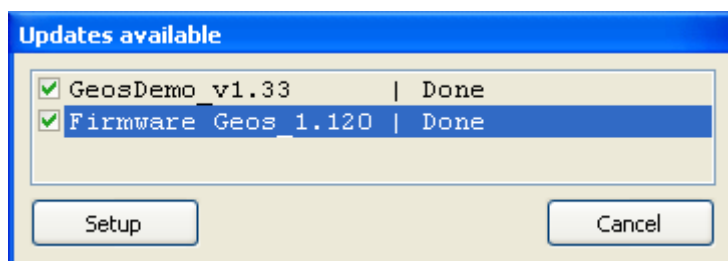


Fig. 5. Download complete window

If updates have been downloaded successfully, they can be setup by clicking «**Setup**». If both updates (**GeoSDemo**[®] and receiver FW) are chosen then FW update starts first followed by **GeoSDemo**[®] setup.

5. Connecting to the Receiver

After program start and language select, the way of establishing connection with the receiver should be defined. As indicated in section 4.1, three ways are available as follows:

1. Automatic scan of the active computer ports (RS232 and USB)
2. Manual assignment of specific computer port
3. Use of the last active computer ports configuration.

To start automatic COM port scanning, select «**Detect COM port automatically**» and click «**OK**» (Fig. 55). The program starts searching for the binary data first, then for the NMEA data. After ports have been detected, the program will switch to the main window. For USB enabled receivers, the program will display virtual COM port number.

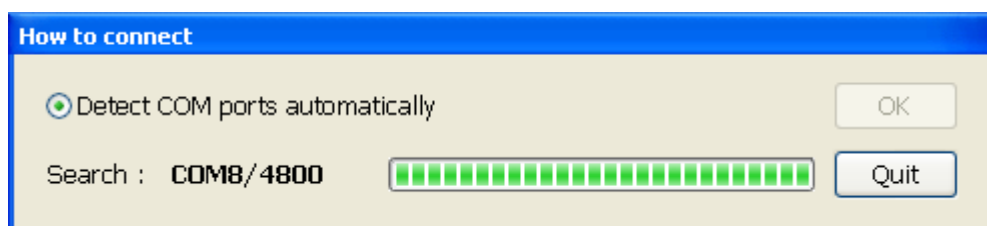


Fig. 55. Automatic COM port scanning

To set COM ports manually, select «**Set COM ports manually**» and click «**OK**». In the window «**Main settings**» (Fig. 9), COM port parameters shall be set. For the receiver option without USB, communication with PC is accomplished via two serial ports (usually COM1 and COM2). If the PC has COM port extension board, then you have to find out and set its COM ports (refer to User Manual of this board).

For USB enabled receivers, virtual COM port number can be defined by the following way:

- Choose «**Start**» → «**Control panel**» → «**System**» → «**Hardware**» → «**Device manager**» and find «**Ports (COM & LPT)**»
- Open it by clicking «**+**». Fig. 56 illustrates the sample with virtual port COM10.

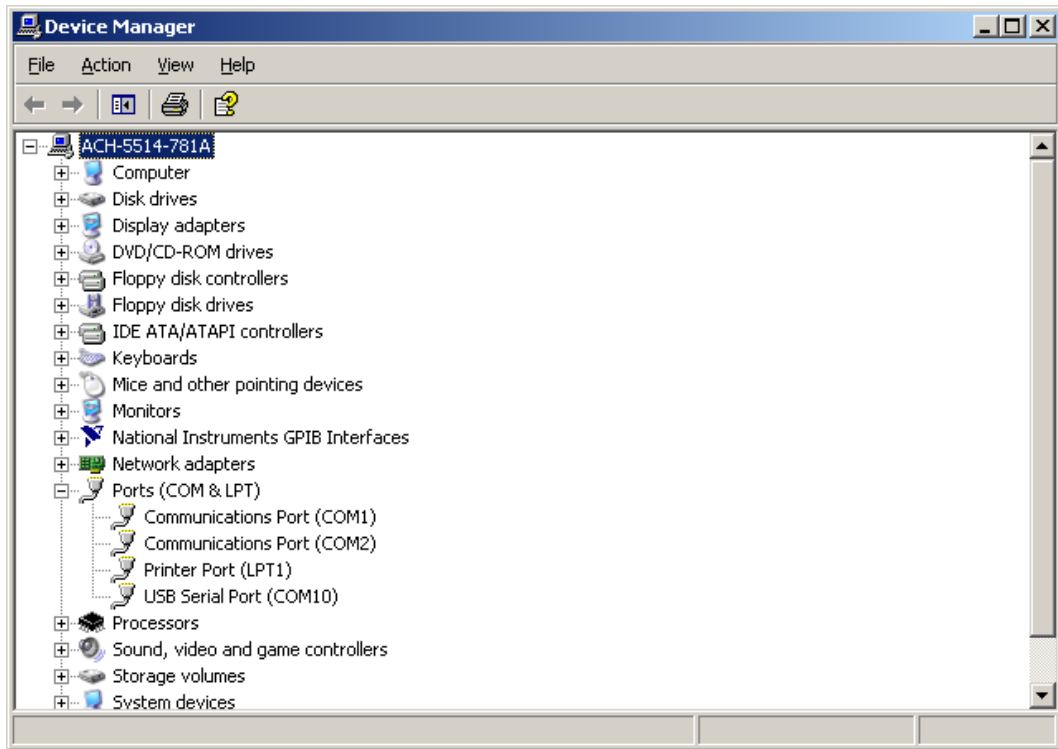


Fig. 56. Finding virtual COM port

Select «**USB Serial Port (COMXX)**» to check COM port properties (Fig. 57).

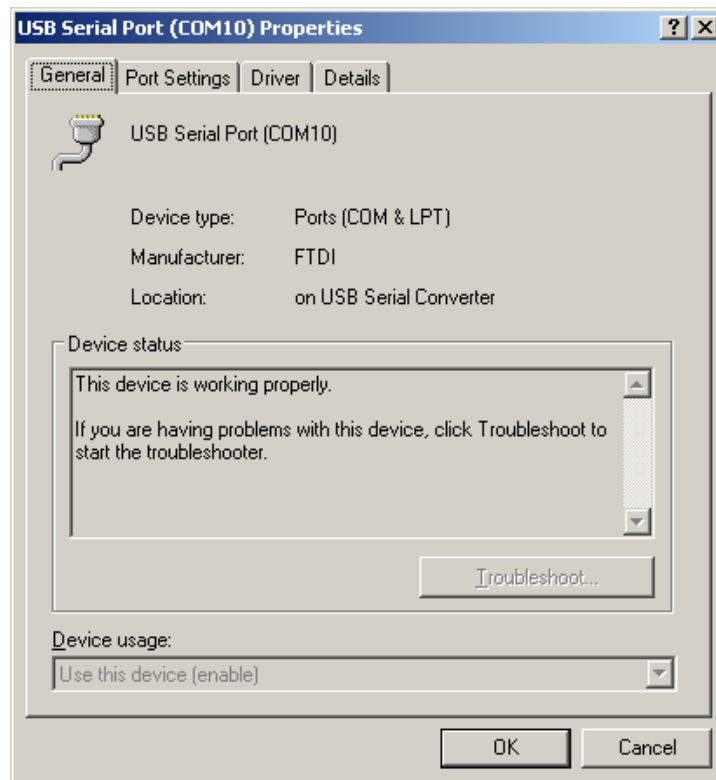


Fig. 57. Virtual COM port properties

If «**Manufacturer**» is specified as «**FTDI**», this port is a desired port (provided that there is no any other device with FTDI USB controller has been connected to the computer). Virtual COM port number should be taken from «**Device Manager**» and set in «**Main settings**» window (Fig. 9) near the «**Binary**» (on default, USB is used for binary data).

If the receiver has been already connected to the computer, user can choose «**Use last COM ports configuration**» and proceed without COM ports settings. The program will automatically establish connection using current COM ports configuration.